




Connecting an ROS to DC6000 to Measure RPM

Wire the ROS as shown below:

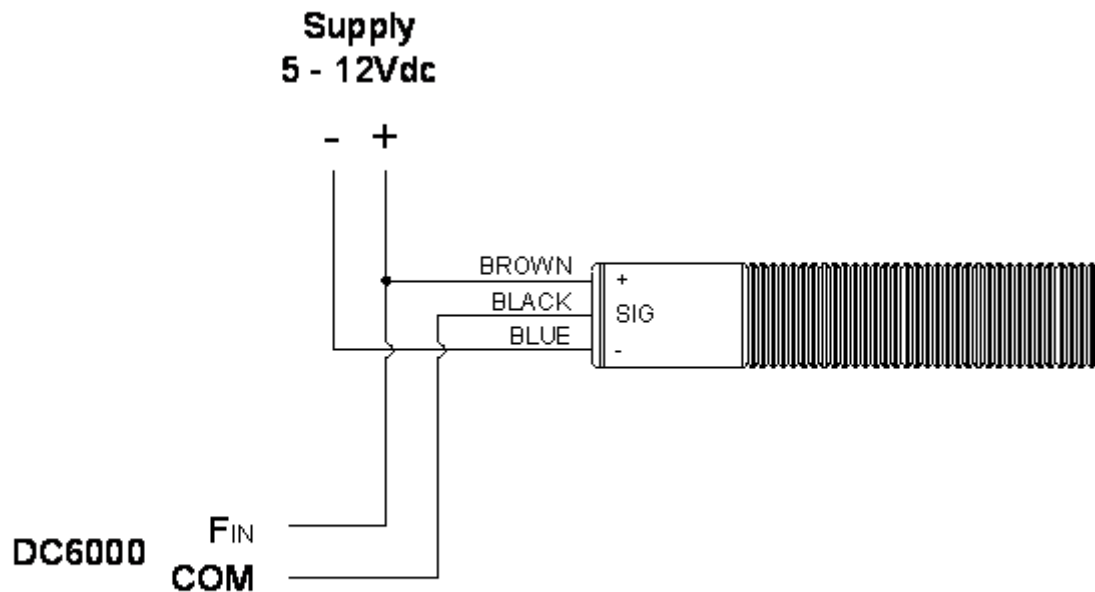

DC6000 Programming:

Set the DC6000 as listed below:

Channel Type: Frequency (Channel 1,6,7 and 12 only)

Input Scale: 1

Output Scale: 60

Set the colors, Unit Tag, Eng Unit, Dec Pt, etc.

The programmed channel will now read in RPM.