



DC 2000 Disk Format - FAQ

(In the Recorder)

Question: How do I format a diskette or Compact Flash card in the recorder.

Solution:

Open the door on the lower front of recorder.

Insert disk (or CF Card), to be formatted, into the disk drive.

On the keypad, depress the "MENU" button.

Display now has 4 buttons - DISPL - PROG - FUNC - EXIT.

Depress "PROG" button.

Arrow down to RECORD SETUP and depress "Enter" button.

Arrow down to FORMAT DISK and depress "Enter".

Box opens in upper right of screen - .

Depress "YES" button and then depress "ENTER" button.

Format cycle will run to completion.

Box opens in the upper right of screen .

Depress "OK" button.