



## DC 2000 Load Configuration FAQ (At the recorder)

**Question:** I have lost my configuration at the recorder. I have a configuration file on a diskette or compact flash card. How do I reload the configuration file into the recorder.

**Solution:**

Open the door on the lower front of recorder.

Insert disk (or CF Card), containing the configuration file, into the disk drive.

On the keypad depress the "MENU" button.

Display now has 4 buttons: DISPL - PROG - FUNC - EXIT.

Depress "PROG" button.

Arrow down to RECORD SETUP and depress "ENTER" button.

Arrow down to Load CFG file and depress "ENTER".

Box opens in upper right of screen - .

Depress "YES" button and then depress "ENTER" button.

Screen shows a list of program names saved on disk. The file name extension is .cfg.

Arrow down list to place pointer on config file to open. Depress "ENTER".

Box opens in the upper right of screen - .

Depress OK button.

Recorder will re-cycle display and come up with the new configuration file loaded.