



DC 2000 Save Configuration FAQ

Question: I wish to save my present recorder configuration for security purposes or to load the same configuration into multiple recorders. How do I save the file?

Solution:

Open the door on the lower front of recorder.

Insert a blank diskette (or CF Card) into the disk drive.

On the keypad depress the "MENU" button.

The display now has 4 buttons at the bottom DISPL - PROG - FUNC - EXIT.

Depress "PROG" button.

Arrow down to "Record Setup" and depress "ENTER" button.

Arrow down to "Filename" and depress "ENTER" button.

In the blank window using the display key pad, type in your file name.

Depress "ENTER" button.

Arrow "Save CFG File" and depress "ENTER".

Box opens in upper right of screen - save config = NO*.

Depress "YES" button and then depress "ENTER" button.

Box opens in the upper right of screen after a delay - Configuration saved.

Depress "OK" button.